

### Keyboard Table

Item.no IS-80-TA03

**Complete with:**

2 posts, 1 horizontal beam,  
1 top shelf, 1 bottom shelf


Can also be used with the  
**Compact system** in combination  
with a **straight extension kit**.




**Extra**  
Padded wheeled frame bag,  
Item IS-TC-01-MB



## Graphic production

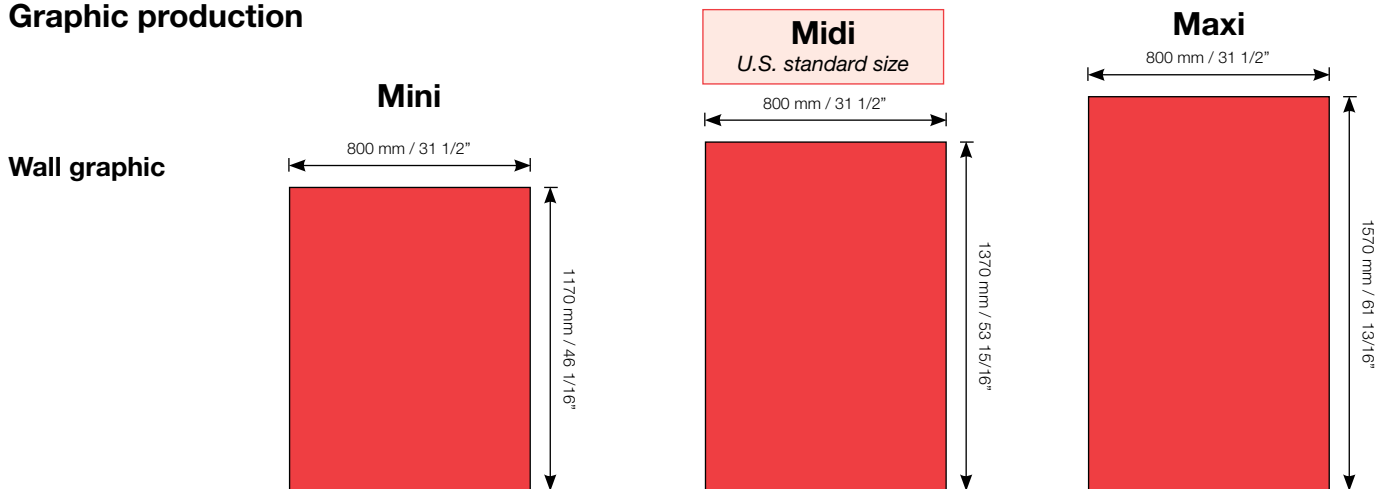

## Keyboard graphic

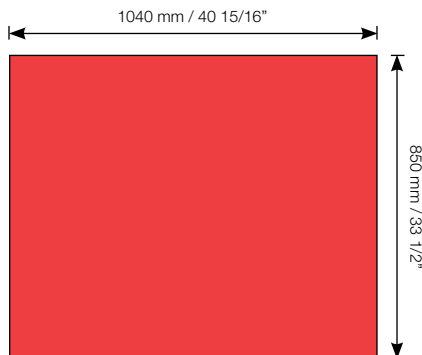

## Graphic panel attachments


### Accessories

#### Kickers & Hangers

(incl. for the first set of panels)  
800 mm / 31 1/5" IS-800-KH

#### Magnetic tape (not incl.)

12 mm/0.5" A tape, 30 m / 98 ft. DM-013-AC  
Each panel needs 6 m/20 ft. (in the midi size)

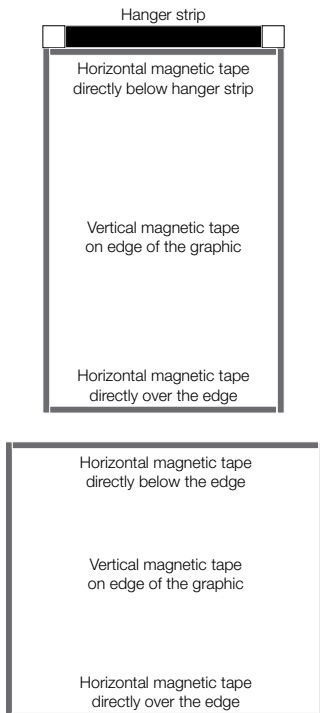

### Printer material

We recommend the following material:

#### Poster paper: 180 gr / 0.4 lb.

The printed graphic panels must be laminated before use.  
Front side: 125 microns (0,125 mm) / 0.005" "deep crystal"  
Reverse side: 250 microns (0,250 mm) / 0.010" "stop light"

#### Polyester film: 330-370 microns (0,350 mm) / 0.013-0.015"

Top laminate: 125 microns (0,125 mm) / 0.005" "deep crystal"

### Mounting of Kickers and Hangers

Kickers and hangers to be fixed at the bottom and at the top of the graphic panels (reverse side).

### Mounting of Magnetic Tape

Magnetic tape to be fixed vertically along each side of the graphic panels.

**IMPORTANT** Carefully mount the magnetic tape slightly inset from the edge of the graphic panel by approximately 0,25 mm / 0.010". Once mounted, a very thin straight white line should show between the edge of the graphic and the outside edge of the magnetic tape. Do not exceed 0,5 mm / 0.020".

### Application Techniques

To obtain optimum adhesion, the bonding surfaces must be well unified, clean and dry. Typical surface cleaning solvents are isopropyl alcohol/water mixture (rubbing alcohol) or heptane.

Note: Be sure to follow solvent manufacturer's precautions and directions for use when using solvents.